

greenworks





2939907AU/ 2940107AU

EN

BATTERY

OPERATOR MANUAL

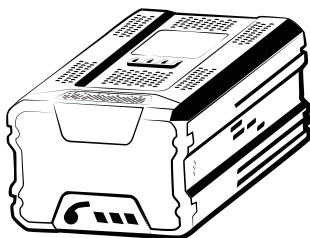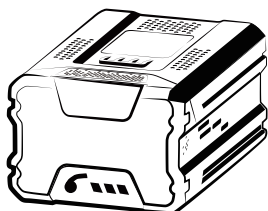

E8038

G80B2/ G80B4

Greenworks Australia
A Division Jak Max P/L
380 Foley's Road Derrimut
Victoria, Australia 3026

www.greenworksaustralia.com

1	Important Safety Instructions.....	2	4	Operation.....	3
2	Safety notes and precautions.....	2	4.1	Check battery capacity.....	3
3	Environmentally safe battery disposal.....	2	5	Technical data.....	3
			6	Warranty.....	3

1 **IMPORTANT SAFETY INSTRUCTIONS**

For the proper use, maintenance and storage of this battery, it is crucially important that you read and understand the instructions given in this manual.

To avoid serious injury, risk of fire, explosion and danger of electric shock or electrocution:

- If the battery pack case is cracked or damaged, DO NOT insert into the charger. Replace with a new battery pack.
- Charge the battery pack only with the recommended charger.
- DO NOT try to short circuit any terminals of battery pack.

▲ WARNING

If the battery fluid gets in your eyes, flush immediately with clean water for at least 15 minutes. Get immediate medical attention. Do not expose the battery pack to rain or wet conditions. Do not immerse the tool, battery pack, or charger in water or other liquid.

- Do not allow the battery pack or charger to overheat. If they are warm, allow them to cool down. Recharge only at room temperature.
- Do not place the battery pack in the sun or in a warm environment. Keep at normal room temperature.
- Store in shady, cool and dry environments. If battery has not been charged for an extended period of time, charge for at least two (2) hours every two (2) months.
- The battery pack cells may develop a small leak under extreme usage or temperature conditions. If the outer seal is broken and the leakage gets on your skin:
 - Use soap and water to wash immediately.
 - Neutralize with lemon juice, vinegar, or other mild liquid.
- If leakage gets in your eyes, follow instructions above and seek medical attention.
- Please check prior use, if output voltage and current of the battery charger is suitable for the battery pack.
- Use protective packaging when transporting battery pack.
- Handle with care.
- Keep away from humidity and fire.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- Recharge only with the chargers specified by the manufacturer. A charger that is suitable for one type of battery pack may create a rise of fire when used with another battery pack.
- CAUTION – This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2 **SAFETY NOTES AND PRECAUTIONS**

- Do not disassemble the battery.
- Keep away from children.
- Do not expose battery to water or salt.
- Battery should be stored in cool, dry location.
- Do not place the battery in high-temperature locations, such as near a fire, heater, etc.
- Do not reverse the positive terminal and the negative terminal of the battery.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Do not knock, strike or step on the battery.
- Do not solder directly onto the battery or pierce the battery with nails or other sharp tools.
- In the event that the battery leaks and the fluid gets into one's eye, do not rub the eye. Rinse thoroughly with water for at least 15 minutes.
- Immediately discontinue use of the battery if, while using, the battery emits an unusual smell, feels hot, changes color, changes shape, or appears abnormal in any other way.

3 **ENVIRONMENTALLY SAFE BATTERY DISPOSAL**



▲ WARNING

 
If the battery pack cracks or breaks, with or without leaks, do not recharge it and do not use. Dispose of the battery and replace with a new battery pack. **DO NOT ATTEMPT TO REPAIR IT!** To avoid injury and risk of fire, explosion, or electric shock, and to avoid damage to the environment:

- Cover the battery's terminals with heavy-duty adhesive tape.
- DO NOT attempt to remove or destroy any of the battery pack components.
- DO NOT attempt to open the battery pack.
- If a leak develops, the released electrolytes are corrosive and toxic. DO NOT get the solution in the eyes or on skin, and do not swallow it.
- DO NOT place these batteries in your regular household trash.
- DO NOT incinerate.
- DO NOT place them where they will become part of any waste landfill or municipal solid waste stream.
- Take them to a certified recycling or disposal center.

4 OPERATION

4.1 CHECK BATTERY CAPACITY

Press the battery capacity indicator (BCI) button. The lights will illuminate according to the batteries capacity level. See chart below:



Lights	Capacity
3 Green Lights	The battery is more than 75% capacity.
2 Green Lights	The battery is between 35% and 75% capacity.
1 Green Light	The battery is less than 35% capacity.
Lights go out	The battery requires charging immediately.

- * 1. BATTERY CAPACITY INDICATOR (BCI) BUTTON
2. LIGHT METRE

BATTERY PROTECTION FEATURES

This lithium-ion battery packs are designed with features that protect the lithium-ion cells and maximize battery life.

If the tool stops during use, release the trigger to reset and resume operation. If the tool still does not work, the battery needs to be recharged.

COLD WEATHER OPERATION

The lithium-ion battery pack can be used in temperatures down to -14°C (6.8°F). Put the battery pack on a tool and use the tool in a light duty application. After about a minute, the pack will warm up and begin operating normally.

5 TECHNICAL DATA

Model	2939907AU
Battery	72 V \equiv , 2Ah, 144Wh, 80V Max
Charge time	60min. (use GCH8020 Charger)

Model	2940107AU
Battery	72 V \equiv , 4Ah, 288Wh, 80V Max
Charge time	120min. (use GCH8020 Charger)

6 WARRANTY

(The full warranty terms and conditions can be found on Greenworks website)

The Greenworks warranty is 4 years on the product, and 2 years on batteries and chargers (consumer/private usage) from the date of purchase. This warranty covers manufacturing faults. A faulty product under warranty might be either repaired or replaced. A unit that has been misused or used in other ways then described in the owner's manual might be rejected for warranty. Normal wear, and wear parts are not considered as warranty. The original manufacturer warranty is not affected by any additional warranty offered by a dealer or retailer.

A faulty product must be returned to the point of purchase in order to claim for warranty, together with the proof of purchase (receipt).

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.