
tradetested

LOUVRE ROOF SYSTEM 6X3,6X4,8X3,8X4

Product code: [LOUVRE6X3] [LOUVRE6X4] [LOUVRE8X3] [LOUVRE8X4]


User manual

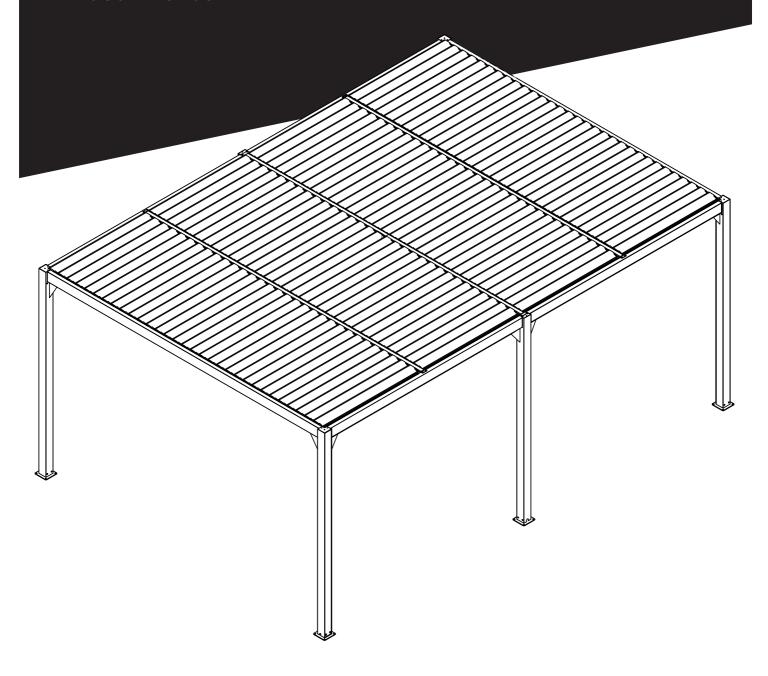


Parts list table


Label	Part		
No.	Description	Drawing	Qty
A 1	Column I		4
А3	Middle column		2
B1	Beam(Left)		1
В2	Beam(Right)		1
C1	Front and rear beam I	• • •	2
C2	Front and rear beam II	*** *** *** *** *** *** *** *** *** *** *** *** ** *** *** **	2
D1	Middle beam with gear box		2
D2	Middle beam		1
E	Louver	B ■ • • • • • • • • • • • • • • • • • •	6*3=88 8*3=88 6*4=120 8*4=120
F	Column bottom plate		4
G	Column cover plate	0 0	4
н	Connectors for middle beams		6

Parts list table				
Label No.	Part Description	Drawing	Qty	
ı	Hinge ring		4	
J	Hand crank		2	
K1	Hexagon socket countersunk head screw	Mex1e	76	
K2	Hexagon socket button head screws	M6X16	42	
КЗ	Flat washer	⊙ ⊘6x16	24	
K4	Cross recessed pan head screw + nut	M4x25 +M4	4	
L	Wooden screw+ Plastic expansion pipe+flat washer	M8 x 75 \$\phi 10 x 50 \$\phi 8\$	К3	
М	Glass glue		1	
N	Plastic plug		6x3=176 8x3=176 6x4=240 8x4=240	
0	Corner support		12	
K5	Self-drilling screw ST4.2x25	ST4. 2x25	48	
Q	Drainage connector (Optional)		6	
R	Cover plate for middle beam		2	
s	Bottom plate for middle column		2	

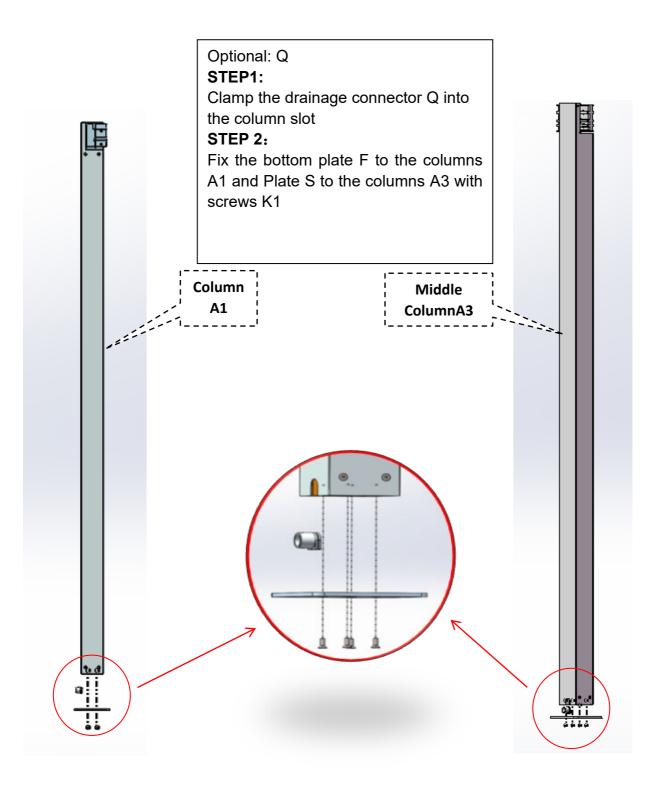


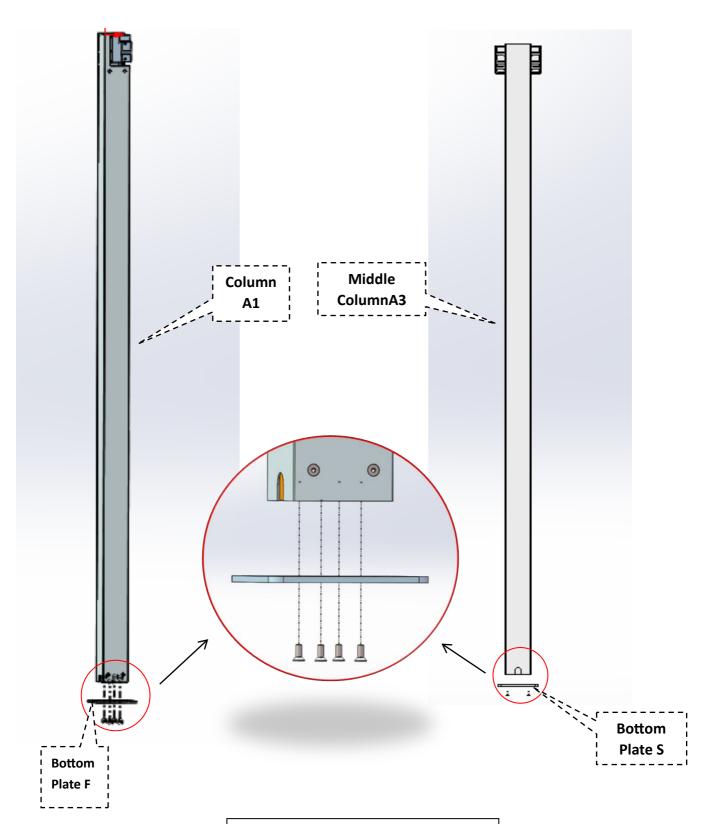



Fix the bottom plate F to the columns A1 and Plate P to the columns A3 with screws K1

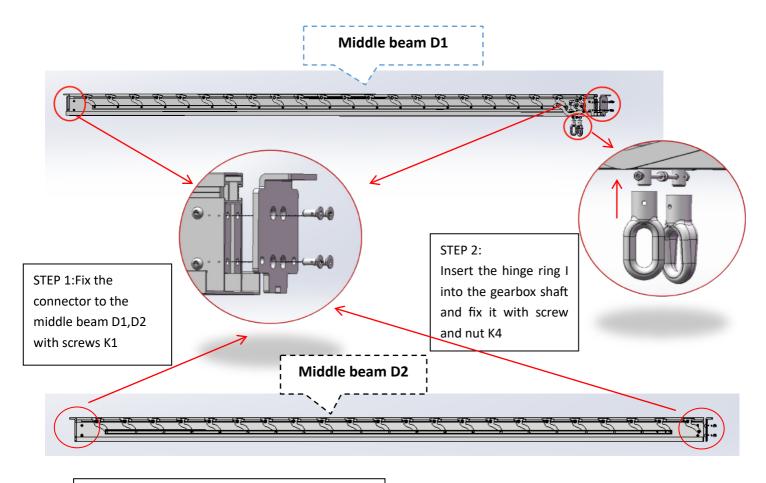


STEP 3: Place the column as shown in the figure below

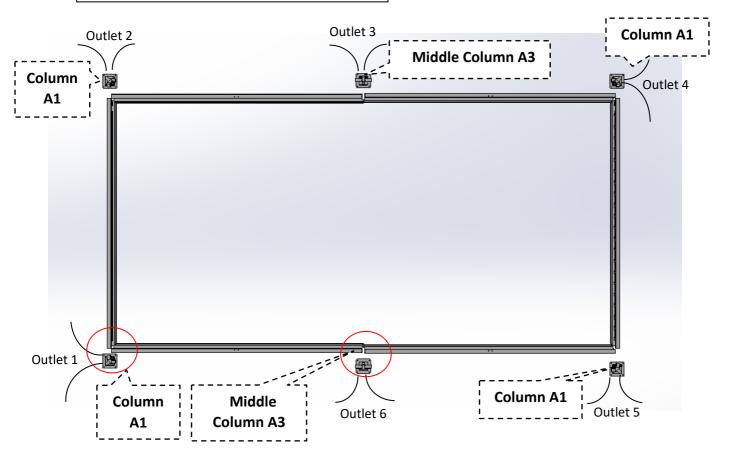

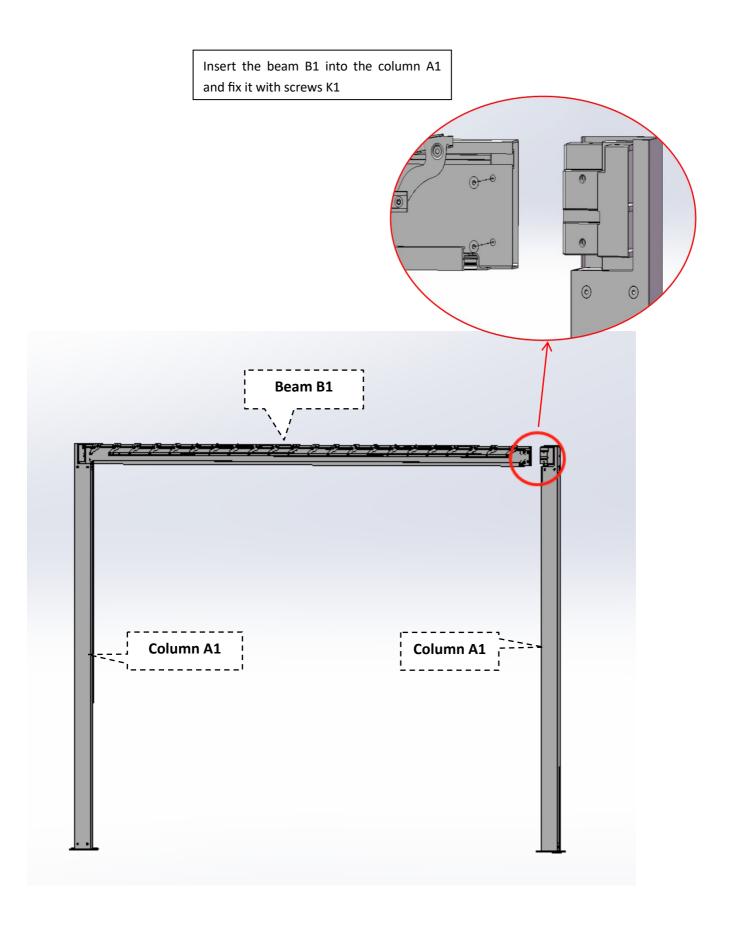


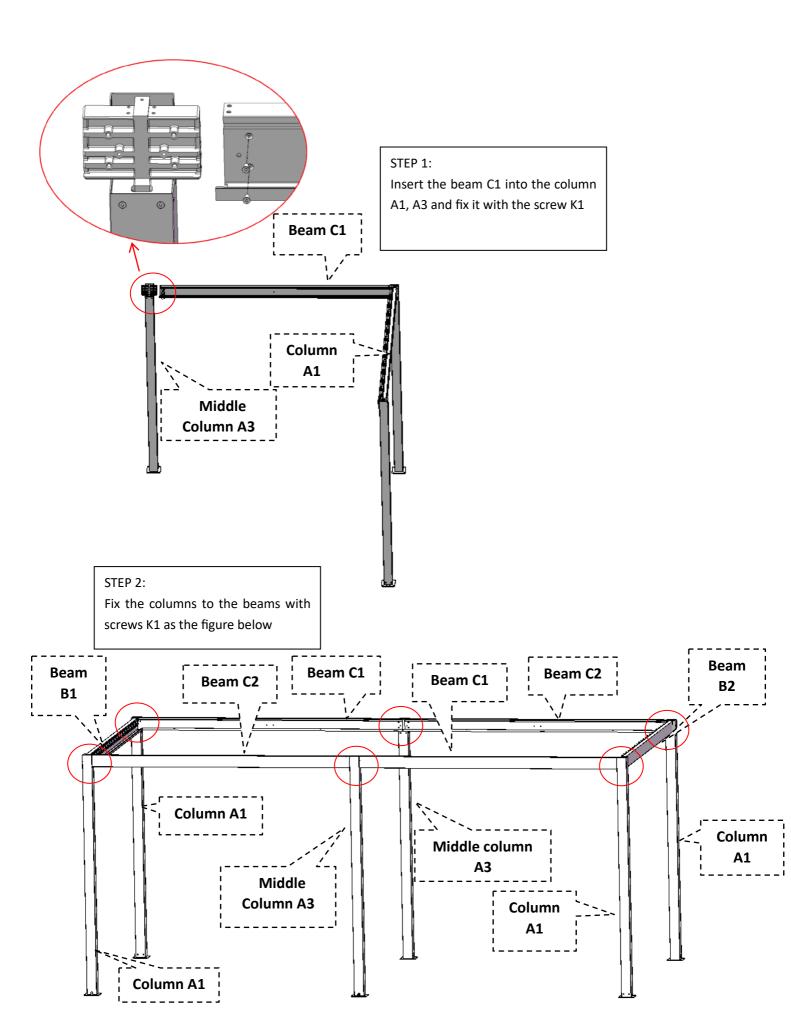


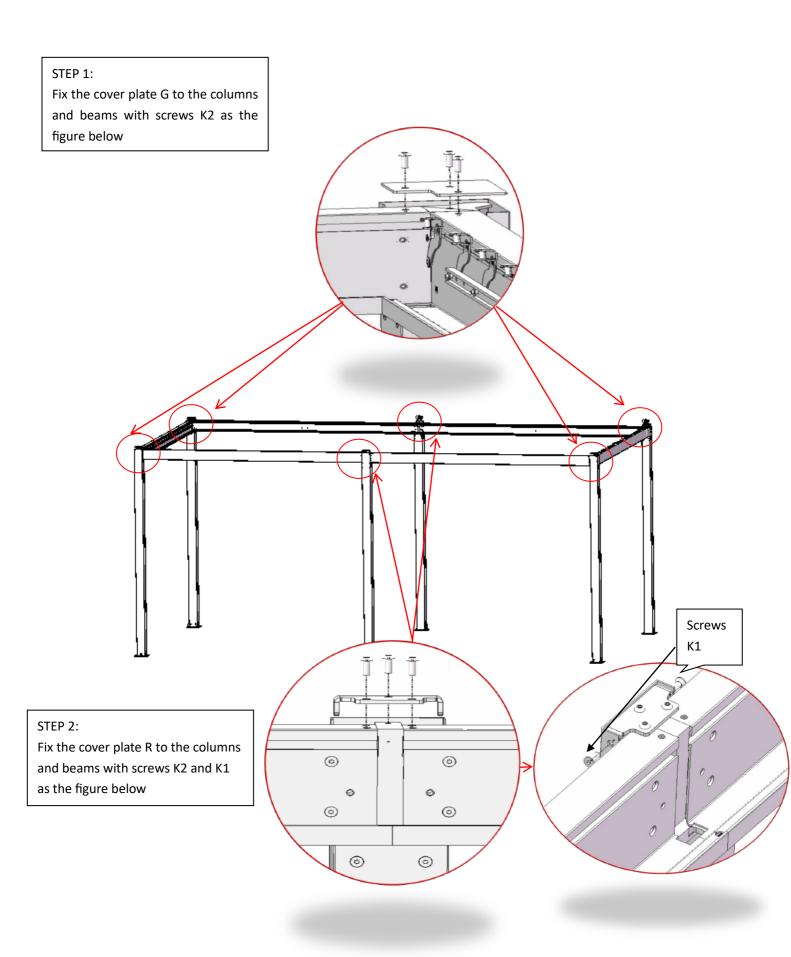



STEP 1:


Adjust the position of 6 columns to keep them perpendicular to the ground. Meanwhile, the width of the top of each two columns should be measured in accordance with the width of the bottom of each two columns. Then use a market pen to mark 24 holes on the ground, which should be corresponding to the holes in the bottom plate.

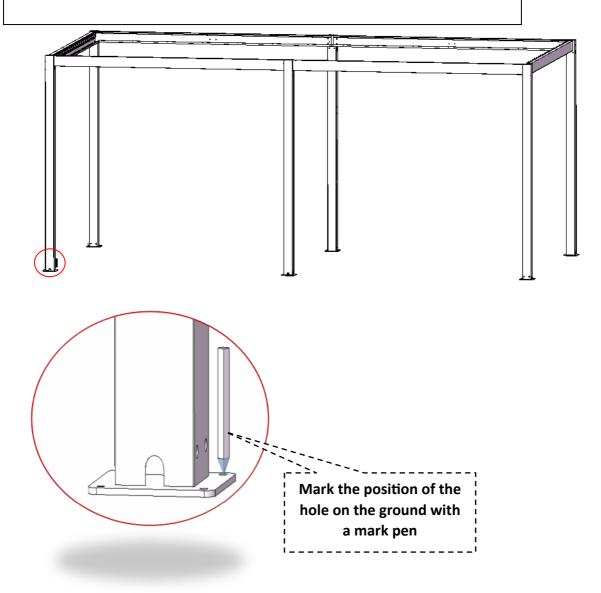

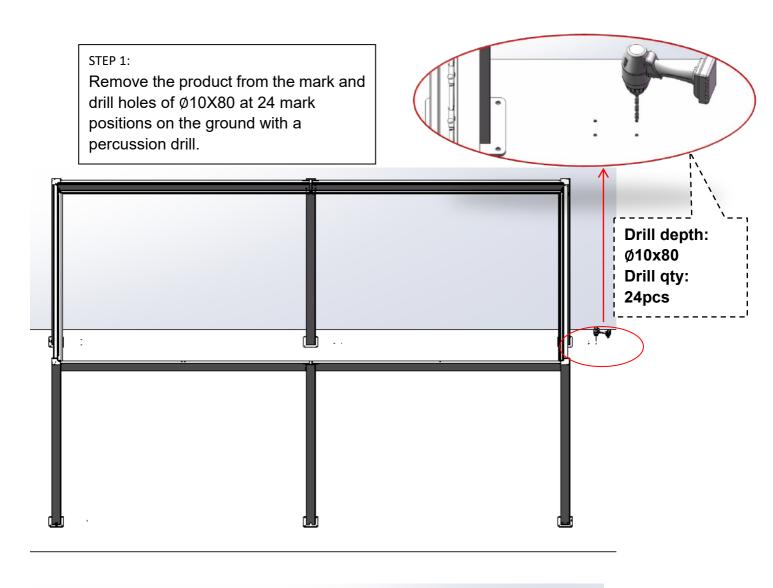

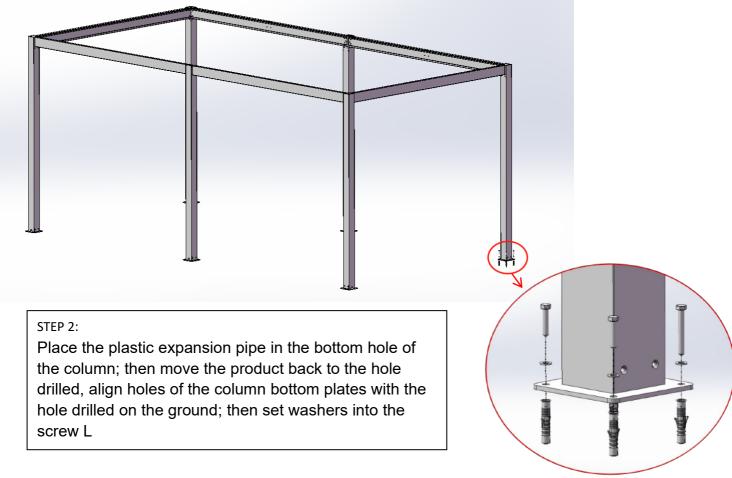

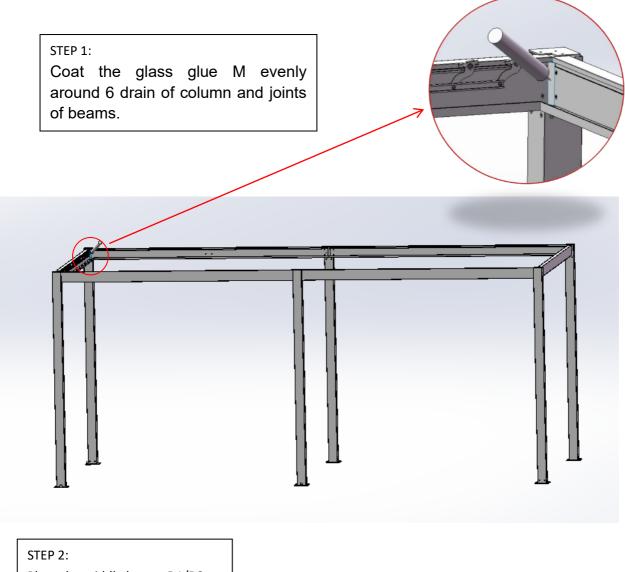

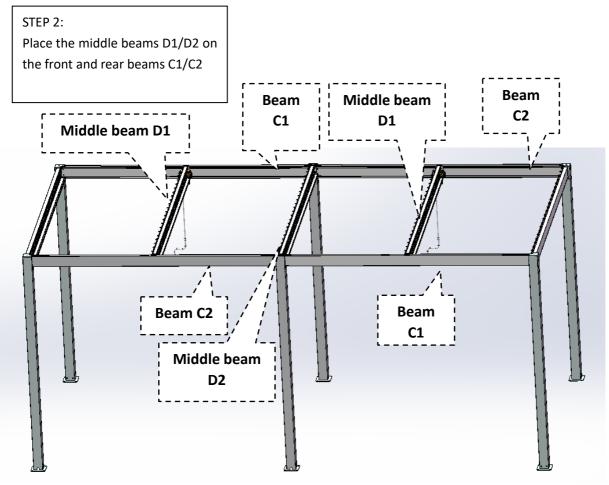



Louver E STEP 1: As shown in the figure below, clip the louver E into the tail of the bracket of the beams at both ends first, then press down the louver to make it clamp and install in the direction indicated by the arrow at the position 1 and 2 respectively. Install the first two louvers at each head


STEP 1:


Align and fix the hole under D1/D2 with screws K2 and washer K3; then Align and fix the hole on the C1/C2;

Install the remain louvers in turn.

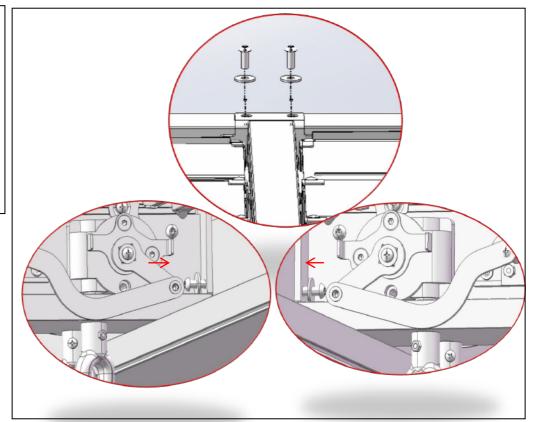

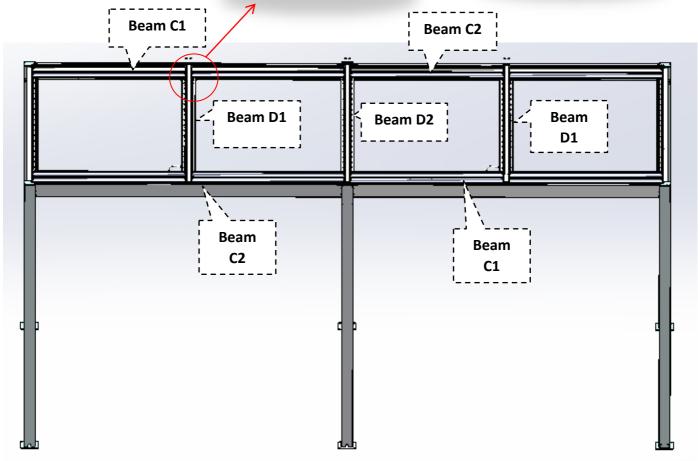

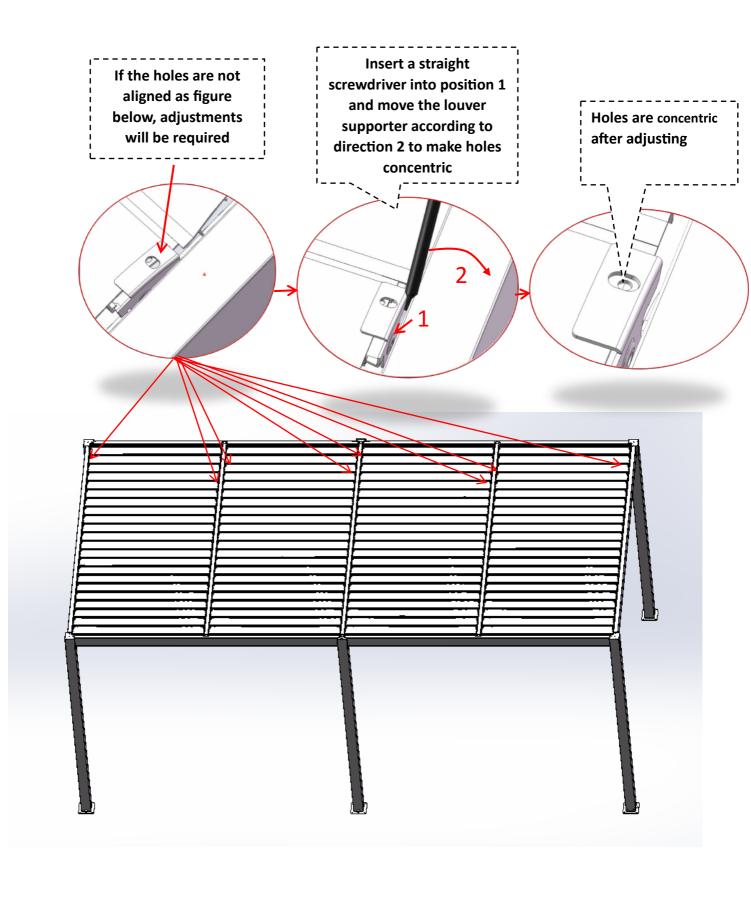

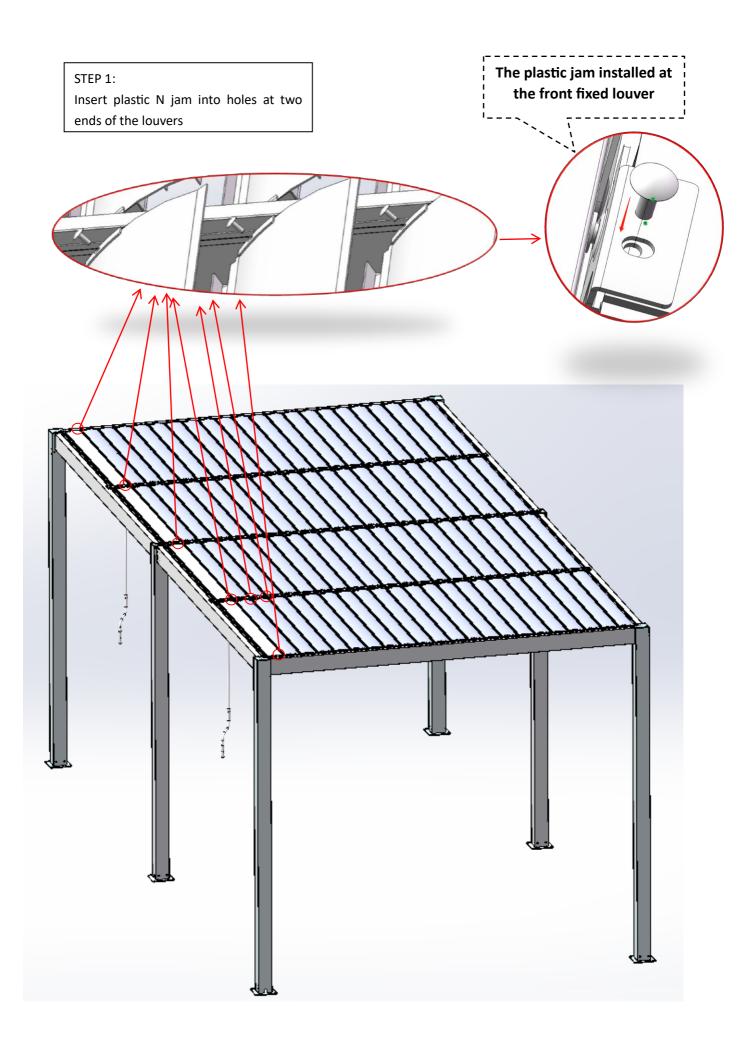

STEP 1:

Put the hand crank J on, turn to open/close the louvers; installation completed.



Install corner support

Align the corner support O with the bottom edge of the beam, fix it with self-drilling screw K5, install the remaining corner support in turn.

