

**Strol**<sup>TM</sup>

# SureWall

## Installation Guidelines

G 011 001


Issue No.: 01

July 2022




# SureWall


## Installation Instructions

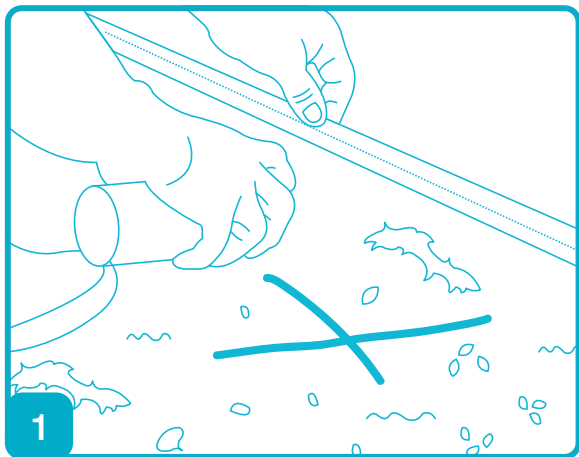

Plan and measure the length and height of the wall then mark and dig post holes.

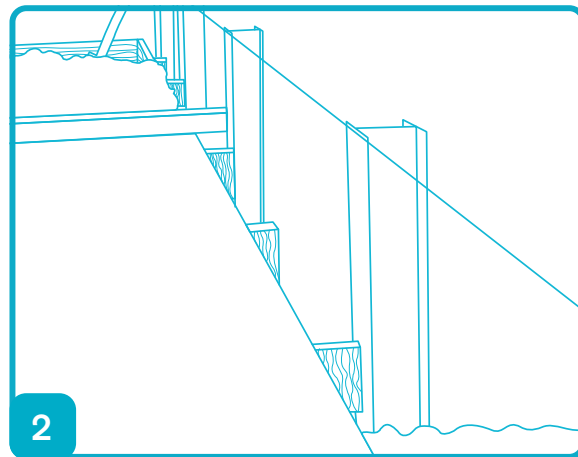

Using a string line, ensure the retaining wall is straight and level before concreting the posts into the ground, then check that the required wall height has been achieved and that posts line up and are vertical. Also ensure the first rail is embedded 50mm in to the ground.

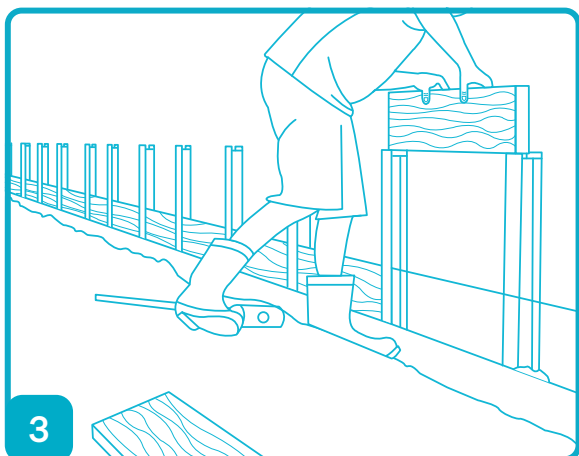

Cut timber rails to length before slotting them into the SureWall retaining posts. Prior to back filling, suitable drainage is recommended, i.e. slotted drainage pipe with FilterSleeve® laid in a trench of drainage metal, additionally the drainage metal can be wrapped in a DuraForce® or FilterPlus® geotextile.



Nail down timber capping (optional), backfill up to the wall and you're done!

### DISCLAIMER

All information provided in this brochure is correct to the best knowledge of the company and is given out in good faith. The information presented herein is intended only as a general guide to the use of such products and no liability is accepted by Strol Ltd for any loss or damage however arising, which results either directly or indirectly from use of such information. Strol Ltd have a policy of continuous development therefore information and product specifications may change without notice. This brochure is subject to copyright in its entirety. The contents may not be reproduced in any form, either in whole or in part, without written permission from Strol Ltd. While every effort has been made to ensure the accuracy of the information in this brochure, Strol Ltd assumes no responsibility for errors or omissions or for any consequences of reliance on this catalogue. Copyright 2017. All rights reserved.