
5 TIER MDF SHELF

tradetested


SKU: 914833

ASSEMBLY INSTRUCTIONS


The only tool you require is a HAMMER

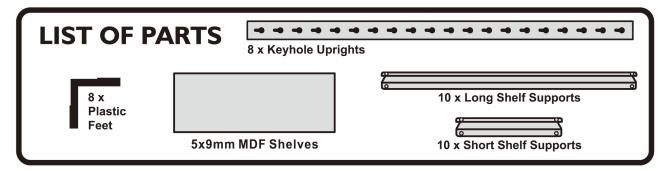

Attach a Plastic Foot to 1 end of 4 of the Keyhole Uprights. NOTE: Ensure keyholes are the correct way up. (Pic 1)

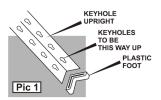


Fit 2 Short Shelf Supports and 2 Long Shelf Supports to the bottom holes (for maximum strength) of 4 Keyhole Uprights by slotting the Keylock Pins in the Supports into the Keyholes in the Uprights and tapping firmly with a hammer to seat in place. (Pic 2)

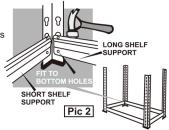


Fit Long and Short Shelf Supports where you want the 2nd Shelf to be positioned. These Supports must not be in the top 2 holes of the Keyhole Upright. (Pic 3) (We have shelf position recommendations listed below)



- (GO TO 5 IF YOU ARE NOT ASSEMBLING AS A WORKBENCH)
 - a) Fit 2 Long Shelf Supports for the top of the Workbench into the holes at the top of the Keyhole Uprights and fit 1 Centre Brace to these Shelf Supports.
 - b) Use the remaining Keyhole Uprights, Long and Short Shelf Supports and Centre Braces to maker either a Straight Workbench or a Corner Workbench, using the same method as above.
 - c) Install MDF shelves
 - d) Bolt the 2 halves of the Workbench together if needed. (nuts and bolts not supplied).

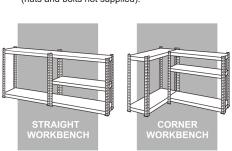


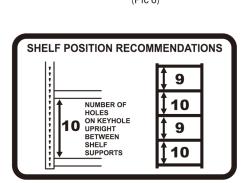


WARNING Handle cut metal edges carefully.

To make 1 side of the top half of the Storage Unit: Fit 3 Short Shelf Supports to 2 Keyhole Uprights. Fit the top Support first. It must be located in the top 2 holes of the Upright. Then fit the 4th Support and lastly the 3rd Support to the bottom h of the Upright. (Pic 4) Repeat this procedure to make the second side.

Fit these 2 top halves to the bottom half of the Unit. (Pic 4)

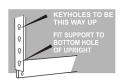

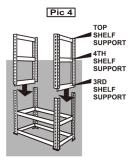

Fit Long Shelf Supports to the Uprights at the 3rd, 4th and top Shelf positions. (Pic 5)





