
5 TIER MDF SHELF

tradetested


SKU: 936092

ASSEMBLY INSTRUCTIONS


The only tool you require is a HAMMER

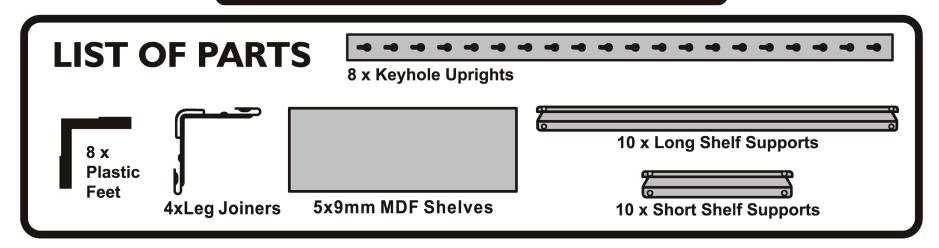

Attach a Plastic Foot to 1 end of 4 of the Keyhole Uprights. NOTE: Ensure keyholes are the correct way up. (Pic 1)

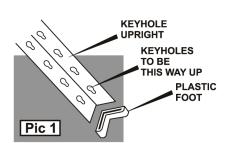

Fit 2 Short Shelf Supports and 2 Long Shelf Supports to the bottom holes (for maximum strength) of 4 Keyhole Uprights by slotting the Keylock Pins in the Supports into the Keyholes in the Uprights and tapping firmly with a hammer to seat in place. (Pic 2)

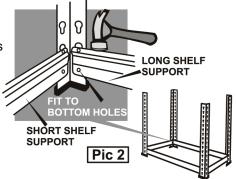

Fit Long and Short Shelf Supports where you want the 2nd Shelf to be positioned. These Supports must not be in the top 2 holes of the Keyhole Upright. (Pic 3) (We have shelf position recommendations listed below).



Fit long shelf supports and short shelf supports to the uprights at the 3rd,4th and top shelf positions.(Pic 5)

Place the 5 MDF shelves onto

tops of the uprights.

(Pic 6)

the 5 shelf supports and fit the remaining 4 plastic feet to the

Content 2

use hammer to

make them tightly. Repeat until all keyhole uprights connected(Pic 4)

- (GO TO 5 IF YOU ARE NOT ASSEMBLING AS A WORKBENCH)
- b) Use the remaining Keyhole Uprights, Long and Short Shelf Supports and Centre Braces to maker either a Straight Workbench or a Corner Workbench, using the same method as above.

CORNER

WORKBENCH

a) Fit 2 Long Shelf Supports for the top of the Workbench into the holes at the top of the Keyhole Uprights and fit 1 Centre Brace to these Shelf Supports.


c) Install MDF shelves


STRAIGHT


WORKBENCH

d) Bolt the 2 halves of the Workbench together if needed. (nuts and bolts not supplied).





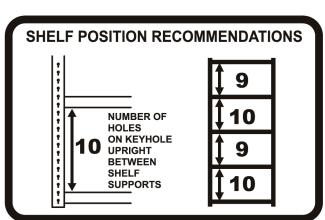

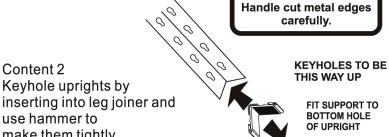

WARNING

